
XP30-10K Photocell QUICK INSTALLATION GUIDE

STEP 1

Position the Photocells so that they are aligned to each other and unobstructed.




STEP 2

Wire the Photocells to the Control Board.

FA-XP30-10K (TX)	"Loop Connector"
+	+28V
-	GND


FA-XP30-10K (RX)	"Loop Connector"
+	+28V
-	GND
СОМ	GND
N.O.	UL or ReOpen

UL Terminal	ReOpen Terminal
Stops gate when opening or closing	Opens gate only when closing

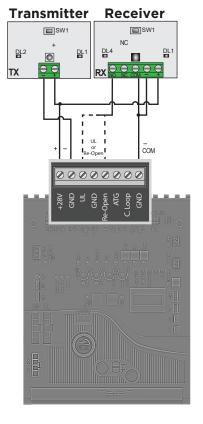

NOTE: Use the supplied XP30AC Conduit Adapter Kit if it is desired to connect the conduit directly to the bottom of the photocells.

STEP 3
Secure the Lens Covers and snap on the Outer Covers.

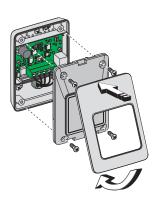

STEP 4
Check the Status LEDs and operation.

